


Instructions for placing boning into petticoat:

1. Insert pre-cut flat wire (boning) into fabric tunnel at the hem of the petticoat (as indicated by arrow).

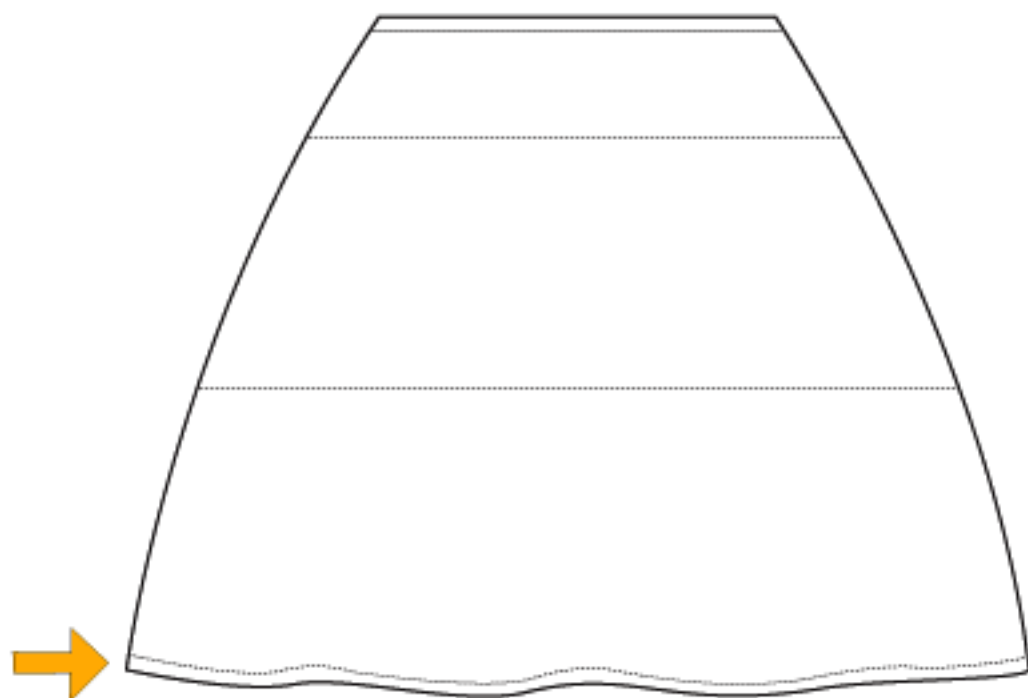

Instructions for placing boning into petticoat:

1. Insert pre-cut flat wire (boning) into fabric tunnel at the hem of the petticoat (as indicated by arrow).

